

HW-1024D OVEN

product specifications

Note:

- 1) the curing oven power jack must grounded.
- 2) If machine don't work, please send it back to factory for repairs.
- 3) Do not touch of heating, in case burn.




一、 Overview:

The multifunctional curing oven using industrial control chip, PID algorithm control temperature, can set temperature and time, the digital display temperature, a buzzer to alert. Provide good human-machine interface, effectively improve the curing speed.

二、 Parameter:

- Voltage: AC220V/50Hz, AC110V/60Hz
- Power: 130W
- Control range: 0~135°C
- Control precise: ±1°C
- Timer range: 1~99min 99seconds
- Machine Dimension: L 185×W 135×H 95mm
- Net weight: 3KG
- Package dimension: L 300×W 245×H 160mm

三、 Machine instruction:

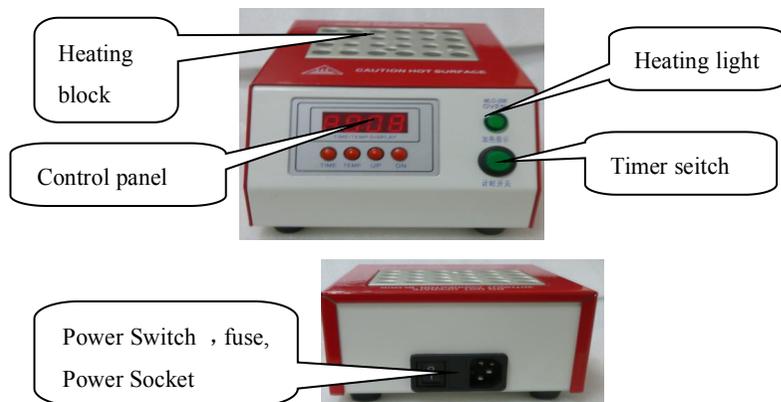

四、 Operation instruction:

1) Setting Time

Hold down the TIME key 2 seconds, can enter the time setting pattern, the digital will shine, press UP (+) key can increase the time in operation, press DN (-) key can reduce time in operation. Click on the TIME key, the exit temperature setting. In the time setting, if during 10 seconds, don't press key, automatic exit time setting. Note: after

clock started, can't set time and temperature

2) Setting temperature

Hold down the TEMP key 2 seconds, can enter the temperature setting pattern, the digital will shine, press UP (+) key can increase the temperature in operation, press DN (-) key can reduce temperature in operation. Click on the TIME key, the exit temperature setting. In the time setting, if during 10 seconds, don't press key, automatic exit time setting. Note: after clock started, can't set time and temperature

3) Timer

When the press on the right of green button (计时开关), the timer start to count down, when the time duration reduced to 0, the buzzer will alert. Alarm, every 2 seconds, and alerting by B sound. When click again green button, stop alert.

If you want to see the temperature, please press the TIME key the control panel will show the temperature.

4) View timer

Press the TIME key, the control panel will show the setting timer.

5) View temperature

Press the TEMP key, the control panel will show the actual temperature.

4) Alert

When time duration reduced to 0, the buzzer alert, every 2 seconds will alert using B sound. can click any red button cancelled alert.

